 



LOCATION AND CONTROLS

500 C

FRONT VIEW




 REAR VIEW




500B

AC/BAT. LED

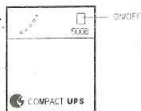


REAR VIEW

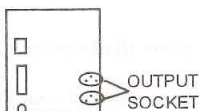


500 VA

FRONT VIEW

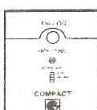


REAR VIEW

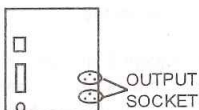


624 B/ 1024B

FRONT VIEW

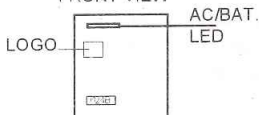

REAR VIEW

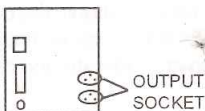

Diagram

Though the front panel is often subject to change, according to up gradations made time to time, this user's manual can be used for all Inline series of COMPACT UPS - The diagrams here could be commonly used for our others models such as 500 E, 1000E, 1000VA with 26 AH battery in built.