



## WHEN IN USE :

- Please do not connect fluorescent light/fan, etc., to the UPS.
- Avoid operations under over load to present failure of your UPS.
- · Ensure that the operating ambient humidity is non-condensing.
- Do not place the COMPACT UPS under any source of vibration, or apply heavy shock such as dropping on the floor.
- Avoid direct Sunshine on the UPS.
- Do not insert wires, pins, screw drivers, or any other sharp objects through ventilation holes.
- Do not use strong volatile agents, such as benzene, or thinner, to clean the surface. Use a dry cloth to clean.
- REPLACE BLOWN FUSES WITH SAME RATING ONLY.
- Replace fuse only once. If it blows again, the UPS needs attention from the service centre.
- Keep at least 1 inch clearance from the ventilation holes on both sides of the unit.
- Do not open the unit. There are no user serviceable parts inside.

## WHEN NOT IN USE

- Read the manual carefully before putting your UPS into operation.
- Leave the COMPACT UPS plugged in the mains line for about 8 hours to make sure the battery is fully charged. Turn the Mains POWER Switch OFF.
  In the case, if the POWER Switch of the UPS is accidentally in the ON' position, you will hear an alarm then switch it off. Unplug the line cord, cover the UPS properly, and store it with care.
- · Keep your UPS clean.
- Keep your UPS away from crossing tubes or heat conductors apparatus.

